

Motorola WPS870G Wireless Print Server

Getting Started

1 Confirm that your box contains these items.

Before you begin, we recommend:

- Installing the printer drivers for the printers you intend to use, if not already installed.
- Collecting the Network Name (SSID) and wireless security settings (like WEP or WPA) for your wireless network.
- If you are running Windows XP, you may need to disable your built-in firewall for the installation process, see User Guide (Troubleshooting) for instructions.

2 Connect your Print Server as shown. (See Section 2 of the User Guide for more information)

First: Connect the Ethernet cable to the router and then to the Print Server.

Second: Connect the power cable to an outlet and then to the Print Server.

3 Insert the Installation Wizard CD-ROM. Begin the installation by clicking the first step. (See Section 2 of the User Guide for more information)

4 Wirelessly connect your Print Server to your router or wireless access point, when prompted. (See Section 2 of the User Guide for more information)

First: Unplug the Ethernet cable from the router and the Print Server. Then, unplug the power cable from the Print Server.

Second: Plug in the power cable for the Print Server. The Print Server will now wirelessly associate with your router or wireless access point.

